

20mm



1,  
Remove the screen house from the carry bag and place onto the ground. Ensure the roof joint (the large black steel joint) is on the floor and never in the air as this can lead to turning the screen house inside out.



2,  
Grasp the pull loop attached to the centre of one of the sidewalls. Pull upwards and outwards on the loop until the sidewall pops open. Walk around the screen house and repeat this with each sidewall.



3,  
Once the sidewall has been popped take the 3pcs top pole out of the bag and unfold.



4,  
Walk into the screen house and place the unfolded pole into the pockets at the top, and then push the pole's centre part up.




5,  
Unfolded pole place into the door's left and right side pockets at the top left and right come.



6,  
Peg each corner of the screen house, peg the PP guyline into the ground and then tighten it.

### 多个帐篷拼接说明

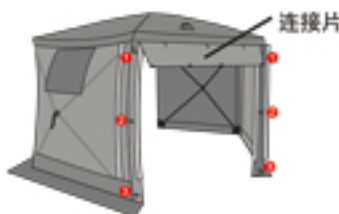

1,  
Open the screen house's door, cover the top roof, logo side is towards to the door.



2,  
Connect the both side's male and female buckles.



3,  
Stick screen house A's Velcro with screen house B's top inner tent Velcro, the tents are connect together. Repeat this step to connect more screen house.

14.5cm

21cm